

#### ASSISTED SERVICE CHILLED DELI - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

## FITTING INSTRUCTIONS

#### General Installation Considerations


- 1) Area in which display is to be sited must have a minimum 2) Install over a sealed floor or ventilated floor void. room volume no less than 66 cu m (CDL3HT), 82 cu m (CDL3HT), 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable 95 cu m (CDL4HT) or 122 cu m (CDL5HT & CDL6HT).

  - 4) Do not site the display beneath a high level of direct sunlight.
- 5) Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

#### A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
CDL2HT + AF2	795	650	111
CDL3HT + AF2	1145	650	133
CDL4HT + AF2	1495	650	161
CDL5HT + AF2	1845	650	181
CDL6HT + AF2	2195	650	195

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

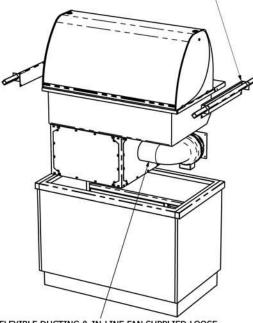

FLEXIBLE DUCTING & IN-LINE FAN SUPPLIED LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"

> FRONT ISOMETRIC (CUSTOMER SIDE)

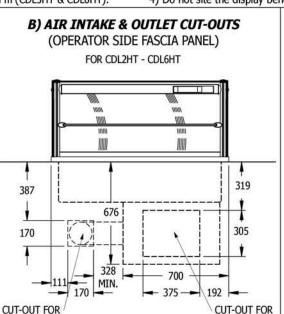


REAR VIEW

(OPERATOR SIDE)

AIR OUTLET GRILLE

IN REAR FASCIA

# D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

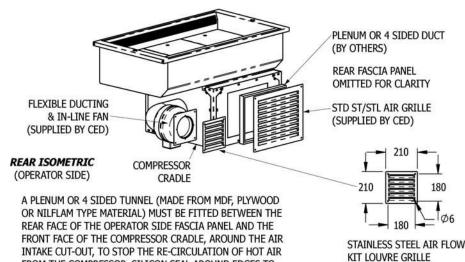


FROM THE COMPRESSOR. SILICON SEAL AROUND EDGES TO

ENSURE THERE ARE NO AIR GAPS.

### C) FITTING INTO COUNTER WORKTOP

AIR INTAKE GRILLE


IN REAR FASCIA

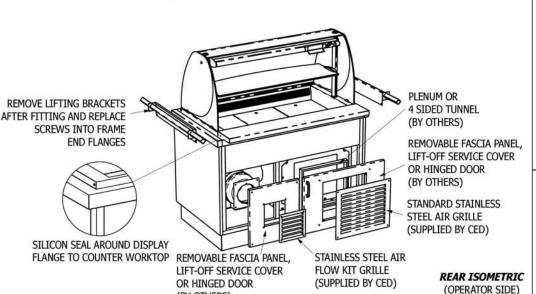

(BY OTHERS)

#### E) FITTING OF LOUVRE GRILLES

(1 SUPPLIED WITH KIT)

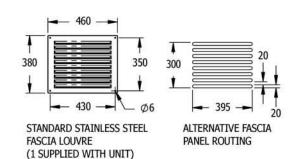



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com