

SELF HELP CHILLED WELL - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

FITTING INSTRUCTIONS

General Installation Considerations

- 1) Area in which display is to be sited must have a minimum 2) Install over a sealed floor or ventilated floor void. room volume no less than 66 cu m (KCW2HT),

- Display will operate in a 24 hour environment.
- 82 cu m (KCW3HT), 95 cu m (KCW4HT) or 122 cu m (KCW5&6HT). 4) Do not site the display beneath a high level of direct sunlight.

AIR OUTLET GRILLE


IN REAR FASCIA

- 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
 - fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT

Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
KCW2HT + AF2	795	650	101
KCW3HT + AF2	1145	650	121
KCW4HT + AF2	1495	650	141
KCW5HT + AF2	1845	650	154
KCW6HT + AF2	2195	650	169

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

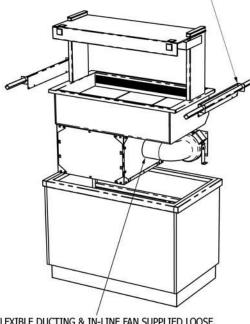

FLEXIBLE DUCTING & IN-LINE FAN SUPPLIED LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"


> FRONT ISOMETRIC (CUSTOMER SIDE)

B) AIR INTAKE & OUTLET CUT-OUTS (OPERATOR SIDE FASCIA PANEL) FOR KCW2HT - KCW6HT 319 387 305 170 192 **CUT-OUT FOR CUT-OUT FOR**

REAR VIEW

(OPERATOR SIDE)

D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

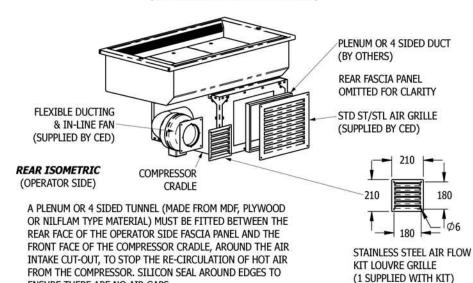


ENSURE THERE ARE NO AIR GAPS.


C) FITTING INTO COUNTER WORKTOP

AIR INTAKE GRILLE

IN REAR FASCIA

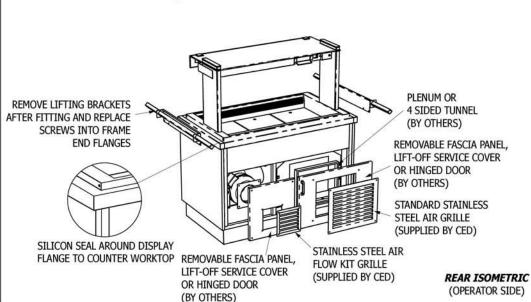

E) FITTING OF LOUVRE GRILLES

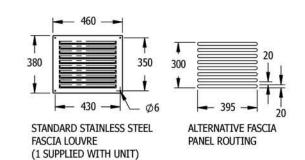



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com