


#### WASH BASINS WITHOUT SPLASH BACK

- 5: Fixing by means of screw the wall mount ( 3 screws M5 not supplied).
- 6: Hooking the wash basins in the support.
- 7: Fix by the wall the bottom part of the jupe ( 2 screws M5 not supplied).

#### Alimentation hot / cold water:

- 8: Connecting the siphon and the fixing struts hot cold water.

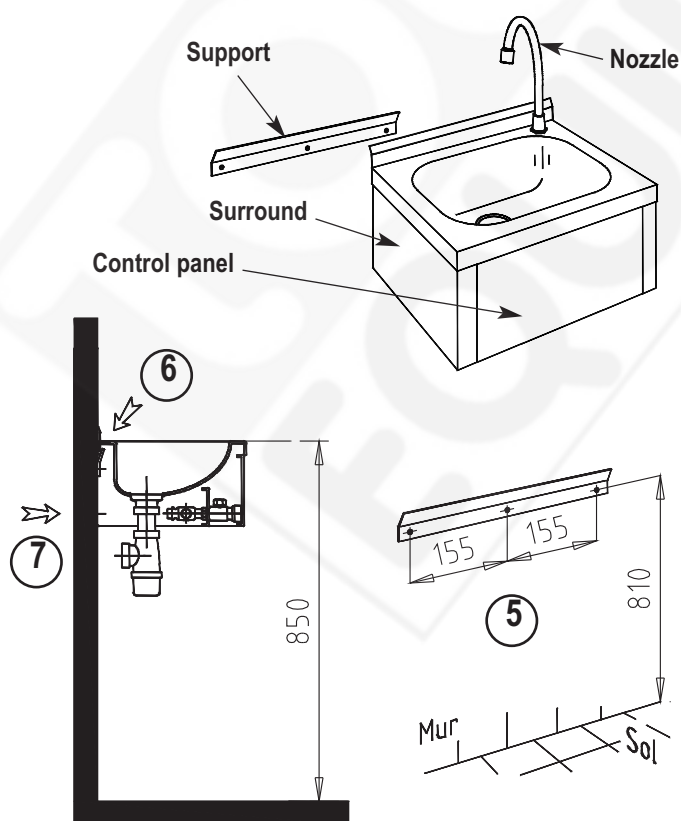


#### MOUNTING GUIDELINE

Install the accessories on the bowl :

- 1: Fit the plunger on the cross piece, then screw the flexible fitting 15/21 to the plunger (seal enclosed).
- 2: Pass the hose under the control panel support.
- 3: Assemble the nozzle, then screw the flexible fitting from the plunger to the nozzle (seal supplied).
- 4: Assemble the pre-mixer on the plunger (seal supplied), hot water on the left. Assemble the plug hole and trap.

#### WASH BASIN WITH SPLASH BACK

- 5: Hook on and screw the splash back on the wash basins (5 x M4 screws with washers supplied).
- 6: Fix the support to the wall (3 x M5 screws not supplied).
- 7: hook the wash basin on to the support.
- 8: Fix the lower part of the surround to the wall (2 x M5 screws not supplied).
- 9: stick on the soap and paper towel dispenser.
- 10: Store the key of the dispenser in the location on the control panel support.

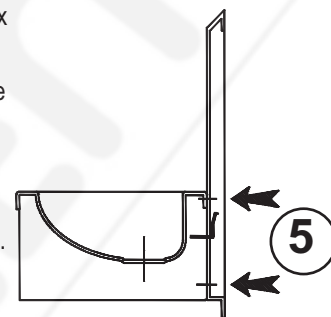

#### hot / cold water supply:

- 11: Connect the trap and the hot and cold water flexible fittings.

#### NB: remember to fit the flat filter seals (supplied).

- 12: Adjust the temperature of the water.

