

SELF HELP CHILLED WELL (NO GANTRY) - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

FITTING INSTRUCTIONS

ENSURE THERE ARE NO AIR GAPS.

(OPERATOR SIDE)

FOR WRAPPED & BOTTLED PRODUCTS ONLY, **UNWRAPPED PRODUCT DISPLAY MAY** REQUIRE SNEEZE GUARD PROTECTION (BY OTHERS)


General Installation Considerations


- 1) Area in which display is to be sited must have a minimum room volume no less than 66 cu m (CW2NGHT),
 - 82 cu m (CW3NGHT), 95 cu m (CW4NGHT) or 122 cu m (CW5&6NGHT).
- Install over a sealed floor or ventilated floor void.
- 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
- 4) Do not site the display beneath a high level of direct sunlight.
- 5) Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
CW2NGHT + AF2	795	650	89
CW3NGHT + AF2	1145	650	103
CW4NGHT + AF2	1495	650	119
CW5NGHT + AF2	1845	650	128
CW6NGHT + AF2	2195	650	144

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

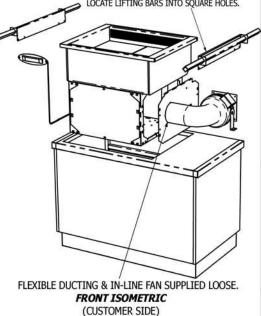

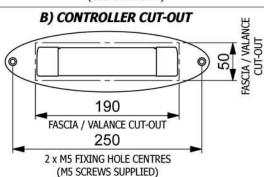


C) AIR INTAKE & OUTLET CUT-OUTS (OPERATOR SIDE FASCIA PANEL) **CUT-OUT FOR**

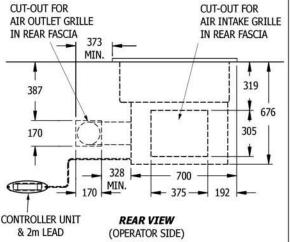


E) AIR INTAKE TUNNEL / PLENUM FITTING

(OPERATOR SIDE FASCIA PANEL)

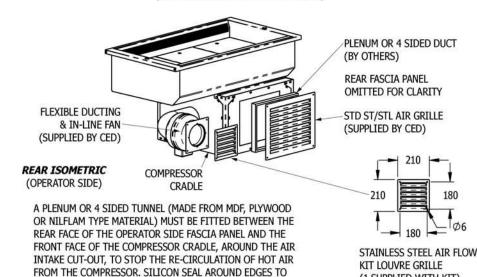


D) FITTING INTO COUNTER WORKTOP

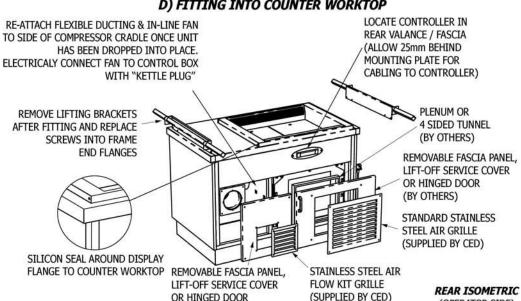

(BY OTHERS)

F) FITTING OF LOUVRE GRILLES

(1 SUPPLIED WITH KIT)

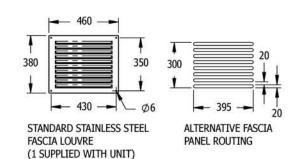



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com