

# ASSISTED SERVICE CHILLED WELL - R290 WITH AIRFLOW KIT AFI (IN/OUT TO CUSTOMER SIDE)

## FITTING INSTRUCTIONS

### General Installation Considerations

 Area in which display is to be sited must have a minimum room volume no less than 66 cu m (CW2HT), 82 cu m (CW3HT), 95 cu m (CW4HT) or 122 cu m (CW5HT & CW6HT).

**CUT-OUT FOR** 

AIR INTAKE GRILLE


IN FRONT FASCIA

- Install over a sealed floor or ventilated floor void.
- room volume no less than 66 cu m (CW2HT), 82 cu m (CW3HT), 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
  - 4) Do not site the display beneath a high level of direct sunlight.
- 5) Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

### A) WORKTOP CUT-OUT

Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
CW2HT + AS2 + AF1	795	650	110
CW3HT + AS3 + AF1	1145	650	128
CW4HT + AS4 + AF1	1495	650	150
CW5HT + AS5 + AF1	1845	650	165
CW6HT + AS6 + AF1	2195	650	182

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

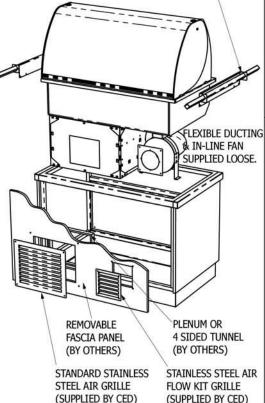


FRONT ISOMETRIC (CUSTOMER SIDE)

# B) AIR INTAKE & OUTLET CUT-OUTS (CUSTOMER SIDE FASCIA PANEL) (FOR CW2HT, CW3HT, CW4HT, CW5HT & CW6HT) 319 387 676 170 192 375

FRONT VIEW

(CUSTOMER SIDE)

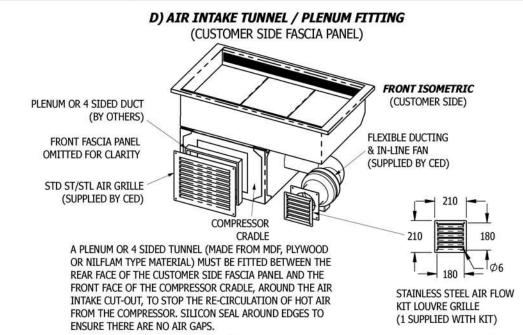


### C) FITTING INTO COUNTER WORKTOP

(OPERATOR SIDE)


CUT-OUT FOR

AIR OUTLET GRILLE

IN FRONT FASCIA

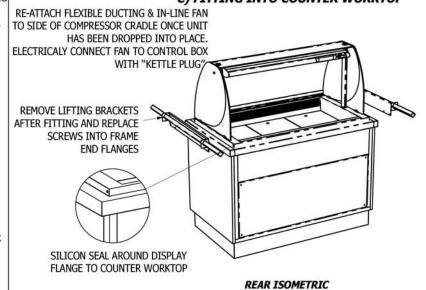

### E) FITTING OF LOUVRE GRILLES

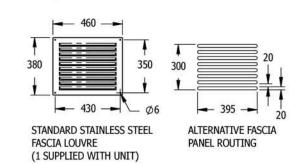



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com