

ASSISTED SERVICE CHILLED WELL - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

- FITTING INSTRUCTIONS

General Installation Considerations

 Area in which display is to be sited must have a minimum room volume no less than 66 cu m (CW2HT), 82 cu m (CW3HT), 95 cu m (CW4HT) or 122 cu m (CW5HT & CW6HT).

CUT-OUT FOR

IN REAR FASCIA


AIR OUTLET GRILLE

- 2) Install over a sealed floor or ventilated floor void.
- room volume no less than 66 cu m (CW2HT), 82 cu m (CW3HT), 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
 - 4) Do not site the display beneath a high level of direct sunlight.
- 5) Display will operate in a 24 hour environment.
- 6) Access to maintain condensing unit should be made via removabl fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
CW2HT + AS2 + AF2	795	650	110
CW3HT + AS3 + AF2	1145	650	128
CW4HT + AS4 + AF2	1495	650	150
CW5HT + AS5 + AF2	1845	650	165
CW6HT + AS6 + AF2	2195	650	182

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

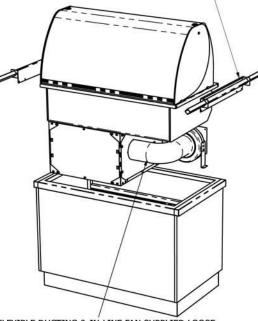

FLEXIBLE DUCTING & IN-LINE FAN SUPPLIËD LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"


FRONT ISOMETRIC (CUSTOMER SIDE)

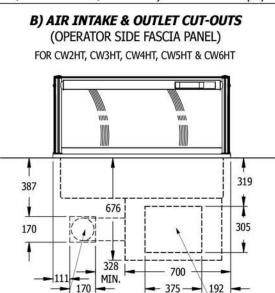

REAR VIEW

(OPERATOR SIDE)

D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

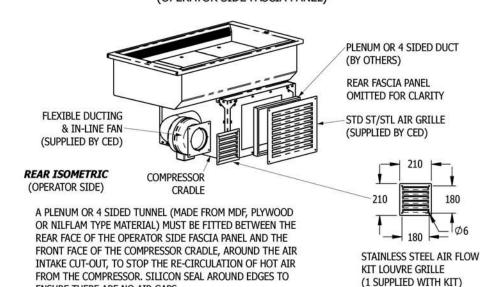


ENSURE THERE ARE NO AIR GAPS.

C) FITTING INTO COUNTER WORKTOP

CUT-OUT FOR


AIR INTAKE GRILLE

IN REAR FASCIA

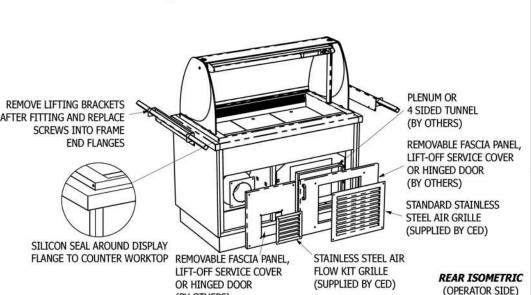

(BY OTHERS)

E) FITTING OF LOUVRE GRILLES

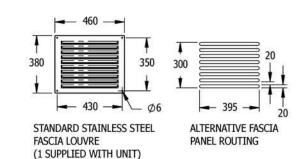



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com