

ASSISTED SERVICE CHILLED WELL - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

FITTING INSTRUCTIONS


General Installation Considerations

- 1) Area in which display is to be sited must have a minimum 2) Install over a sealed floor or ventilated floor void. room volume no less than 66 cu m (KCW2HT),
 - 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
- Display will operate in a 24 hour environment.
- 82 cu m (KCW3HT), 95 cu m (KCW4HT) or 122 cu m (KCW5&6HT). 4) Do not site the display beneath a high level of direct sunlight.
- fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
KCW2HT + KAS2 + AF2	795	650	115
KCW3HT + KAS3 + AF2	1145	650	137
KCW4HT + KAS4 + AF2	1495	650	159
KCW5HT + KAS5 + AF2	1845	650	174
KCW6HT + KAS6 + AF2	2195	650	188

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

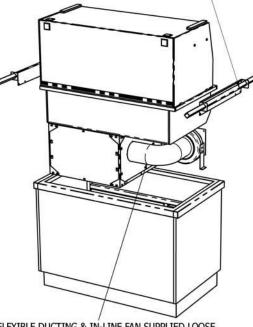


FLEXIBLE DUCTING & IN-LINE FAN SUPPLIED LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"

> FRONT ISOMETRIC (CUSTOMER SIDE)

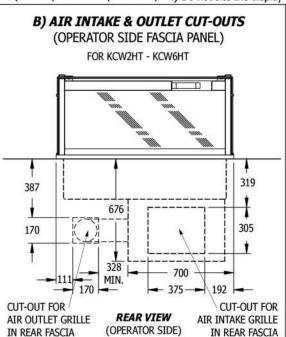


D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

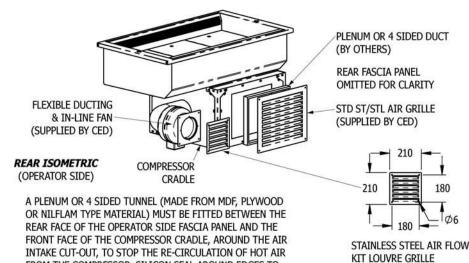

INTAKE CUT-OUT, TO STOP THE RE-CIRCULATION OF HOT AIR FROM THE COMPRESSOR. SILICON SEAL AROUND EDGES TO ENSURE THERE ARE NO AIR GAPS.

E) FITTING OF LOUVRE GRILLES

(1 SUPPLIED WITH KIT)

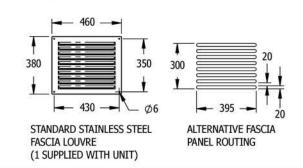



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com

C) FITTING INTO COUNTER WORKTOP

