

SELF HELP CHILLED ISLAND WELL - R290 WITH AIRFLOW KIT AFI (IN/OUT TO CUSTOMER SIDE)

FITTING INSTRUCTIONS


General Installation Considerations

- 1) Area in which display is to be sited must have a minimum 2) Install over a sealed floor or ventilated floor void. room volume no less than 66 cu m (KCIW2HT),
 - 82 cu m (KCIW3HT), 95 cu m (KCIW4HT) or 122 cu m (KCIW5&6HT).
- 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
- 4) Do not site the display beneath a high level of direct sunlight.
- Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT


| Model Ref. | Worktop Cut Out Size (mm) | | Model Weight |
|---------------|------------------------------|-------|-----------------|
| | Length | Width | (in Kg) |
| KCIW2HT + AF1 | 795 | 650 | 101 |
| KCIW3HT + AF1 | 1145 | 650 | 121 |
| KCIW4HT + AF1 | 1495 | 650 | 141 |
| KCIW5HT + AF1 | 1845 | 650 | 161 |
| KCIW6HT + AF1 | 2195 | 650 | 167 |


FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

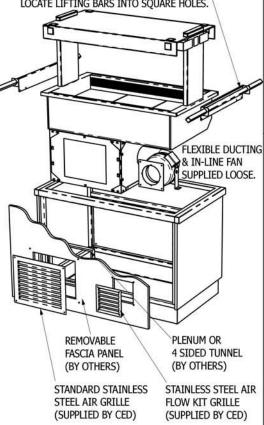

FRONT ISOMETRIC


(CUSTOMER SIDE)

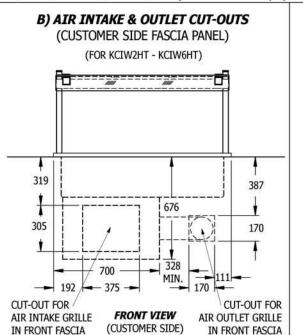

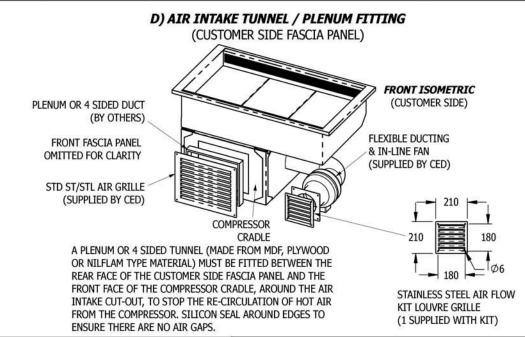


C) FITTING INTO COUNTER WORKTOP

(OPERATOR SIDE)

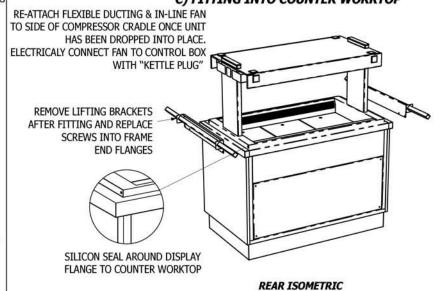

E) FITTING OF LOUVRE GRILLES

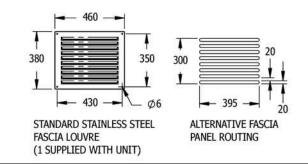



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com