

### SELF HELP CHILLED TIERED WELL - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

# FITTING INSTRUCTIONS

#### General Installation Considerations


- 1) Area in which display is to be sited must have a minimum 2) Install over a sealed floor or ventilated floor void. room volume no less than 66 cu m (KCTW2HT), 82 cu m (KCTW3HT) or 95 cu m (KCTW4HT).

  - 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable
  - 4) Do not site the display beneath a high level of direct sunlight.
- Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

#### A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
KCTW2HT + AF2	795	650	113
KCTW3HT + AF2	1145	650	134
KCTW4HT + AF2	1495	650	163

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

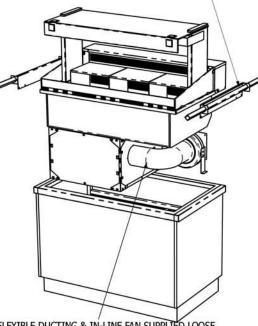


FLEXIBLE DUCTING & IN-LINE FAN SUPPLIED LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"

> FRONT ISOMETRIC (CUSTOMER SIDE)

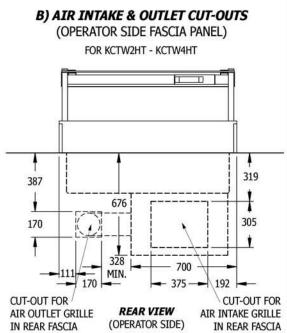


#### D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

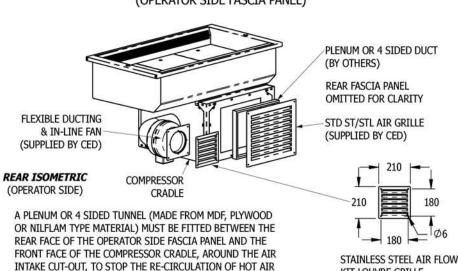

FROM THE COMPRESSOR. SILICON SEAL AROUND EDGES TO

ENSURE THERE ARE NO AIR GAPS.

## C) FITTING INTO COUNTER WORKTOP

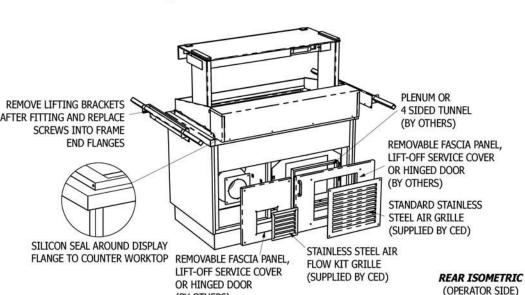


(BY OTHERS)

### E) FITTING OF LOUVRE GRILLES

KIT LOUVRE GRILLE

(1 SUPPLIED WITH KIT)

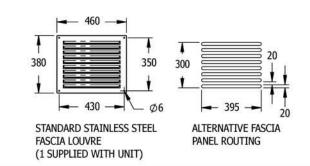



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com