

SELF HELP CHILLED DELI - R290 WITH AIRFLOW KIT AF2 (IN/OUT TO OPERATOR SIDE)

FITTING INSTRUCTIONS

General Installation Considerations

- 1) Area in which display is to be sited must have a minimum room volume no less than 66 cu m (KCDSHL2HT), 82 cu m (KCDSHL3HT), 95 cu m (KCDLSH4HT) or 122 cu m (KCDLSH5HT & KCLDSH6HT).
- 2) Install over a sealed floor or ventilated floor void.
- 3) Do not site the display within 2m of ceiling mounted air conditioning grilles. 6) Access to maintain condensing unit should be made via removable


ENSURE THERE ARE NO AIR GAPS.

- 5) Display will operate in a 24 hour environment.
- fascia panels or doors to customer and operator side of counter.

A) WORKTOP CUT-OUT


Model Ref.	Worktop Cut Out Size (mm)		Model Weight
	Length	Width	(in Kg)
KCDLSH2HT + AF2	795	650	112
KCDLSH3HT + AF2	1145	650	132
KCDLSH4HT + AF2	1495	650	158
KCDLSH5HT + AF2	1845	650	175
KCDLSH6HT + AF2	2195	650	193

FIX LIFTING BRACKETS TO FRAME END FLANGES USING SCREWS ALREADY IN FLANGES, THEN LOCATE LIFTING BARS INTO SQUARE HOLES.

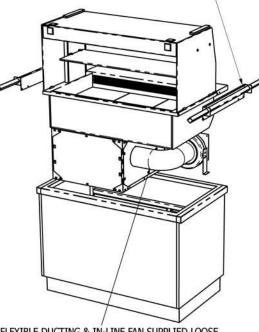


FLEXIBLE DUCTING & IN-LINE FAN SUPPLIED LOOSE. RE-ATTACH FLEXIBLE DUCTING & IN-LINE FAN TO SIDE OF COMPRESSOR CRADLE ONCE UNIT HAS BEEN DROPPED INTO PLACE. ELECTRICALY CONNECT FAN TO CONTROL BOX WITH "KETTLE PLUG"


> FRONT ISOMETRIC (CUSTOMER SIDE)

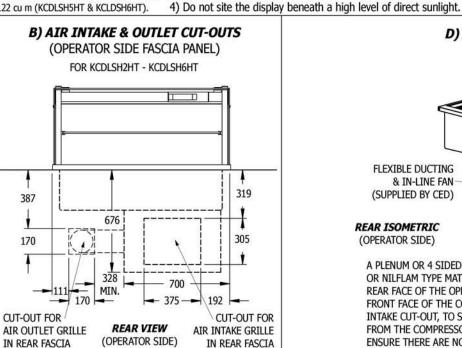

D) AIR INTAKE TUNNEL / PLENUM FITTING (OPERATOR SIDE FASCIA PANEL)

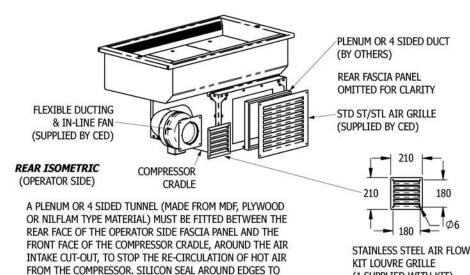


C) FITTING INTO COUNTER WORKTOP

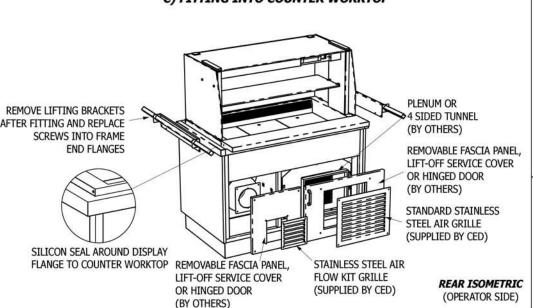

E) FITTING OF LOUVRE GRILLES

(1 SUPPLIED WITH KIT)

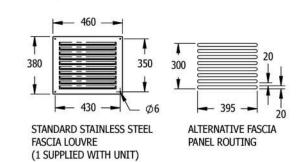



Tel. 01254 238 282 Fax. 01254 238 228 e-mail: aftersales@cedlimited.com